

Instructions for Cleaning LD-V1000 Optics

1. Turn LD player upside down (with shipping screw in place).
2. Remove bottom cover (7 screws).
3. Remove 5 green screws from the bracket that holds the VSOP board, and lift the VSOP board up and out of the way.
4. Remove black plastic cover (2 screws and black electrical tape).
5. Using freon TF and lens cleaning tissue, clean the following:
 - end of laser tube
 - fixed mirrors (2)
 - square prism
 - ¼" wave plate
 - tracking and tangential mirrors


CAUTION: Use light pressure on the tracking and tangential mirrors.

6. Replace slider cover (new tape should be used).
7. Replace all screws and bottom cover.

CAUTION: Do not clean grating!

SEE PAGES 2 AND 3 FOR DIAGRAMS

LASER DISC OPTICAL PATH

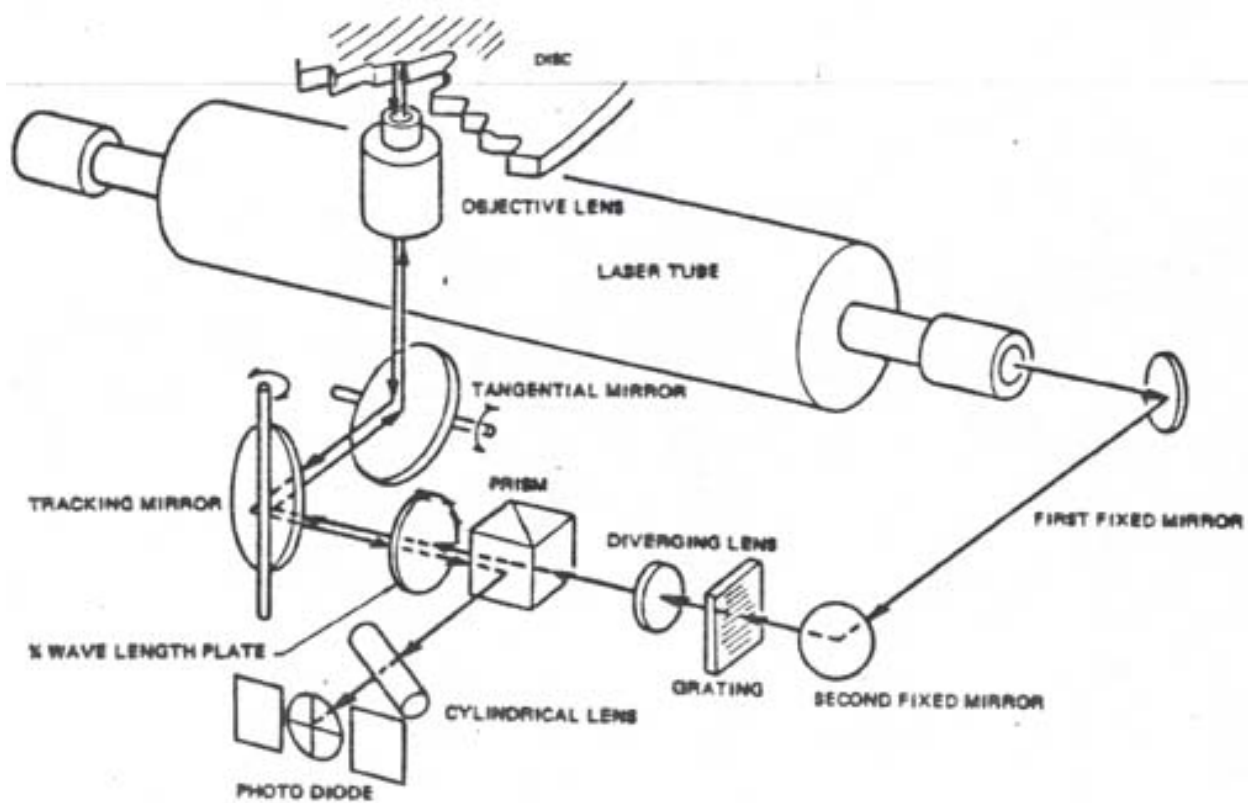

6-3. SLIDER

